

# Ikegami

# HDR

## HLM-2460WA

### 24-inch Full HD Multi-format LCD Monitor




REAR PANEL

Building on the renowned features and performance of its predecessor, the HLM-2460WA reproduces more accurate dynamics of the source images thanks to a newly-developed LCD panel with an impressive 1800:1 contrast ratio. Seamless tally integration via Ethernet is made possible by the support of the TSL V5.0 protocol. The HLM-2460WA fits into various broadcast workflow applications, including editing suites where a computer-friendly WUXGA display resolution is preferred, as well as monitor walls, among others.


#### ◆ Loaded with Information Display

The HLM-2460WA supports dynamic and static UMD in addition to the features shown below.

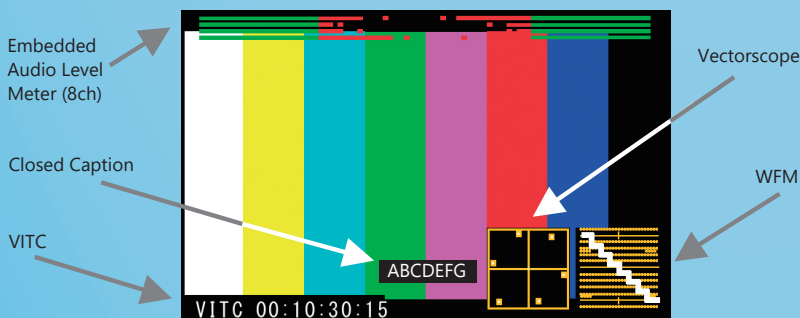

#### ◆ User Defined Markers

A program production aid allowing up to 12 lines or boxes to be displayed. These can be drawn easily using a USB mouse.

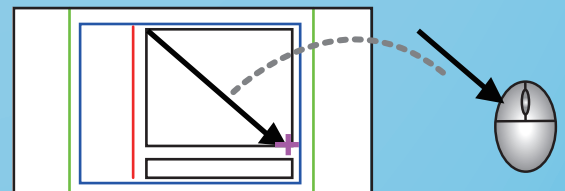

#### ◆ Automatic Calibration (Optional)

Optional AWC software ensures consistent and accurate color reproduction over time. By acquiring real-time measurement data via a colorimeter, Windows-based software automatically aligns the R/G/B gain to exhibit the correct white balance.

Compatible Colorimeters :  
Konica Minolta CA-310 / CA-410  
JETI Specbos 1211-2  
Klein Instruments K10-A

## Specifications

Display Panel	LCD Type		IPS Type	
	Resolution		1920 x 1200	
	Display Size		24-inch	
	Brightness		400 nits	
	Contrast Ratio		1800:1	
	Display Color		1.07 billion colors	
	Viewing Angle		178° (Up & Down, Left & Right)	
Ratings	Power Requirement		100 to 120 / 200 to 240 V AC	
	Power Consumption		59 W Max	
	Dimensions		W 562 x H 398 x D 86 mm (22.1 x 15.7 x 3.4 inches) 9 RU Height, Excluding Desktop Stand	
	Weight		Approx 9.1 kg (20.06 lb) Excluding Desktop Stand	
Video	Input / Output	3G/HD/SD-SDI	2-input / 2-output (Active Through) or 4-input	
		VBS	1-input / 1-output (Loop Through)	
		HDMI	1-input (HDCP)	
	Supported Formats	HDTV		1080i/50/59.94/60
				1080p/25/29.97/30/50/59.94/60
				1080PsF/25/29.97/30
				720p/25/29.97/30/50/59.94/60
				1035i/59.94/60 (SDI only)
		SDTV		480i/59.94, 576i/50
				480p/59.94, 576p/50 (HDMI only)
Audio	Input	Embedded Audio	● (SDI & HDMI)	
		Analog Audio	● (Stereo Mini Jack)	
	Output	Embedded Audio	● (SDI)	
		Speakers	● 1W + 1W	
		Headphones	● (Stereo Mini Jack)	
Control	Ethernet		● Remote Control & Tally / UMD (TSL V5.0)	
	RS-485		● Tally / UMD (TSL V3.1)	
	GPIO		●	

● : Standard

Design and specifications are subject to change without notice.

### Ikegami Tsushinki Co., Ltd.

■ URL: [www.ikegami.co.jp/en/](http://www.ikegami.co.jp/en/)

U529A244-SELF

■ Headquarters : 5-6-16 Ikegami, Ohta-ku, Tokyo 146-8567, Japan ..... TEL.+81-(0)3-5700-1111

■ Beijing Office : Tower A Room No.823-824 Jia Tai International Mansion

No.41 East Fourth Ring Road, Chaoyang District, Beijing, China ..... TEL.+86-10-8571-0350

### Ikegami Electronics (U.S.A.), INC.

■ URL: [www.ikegami.com](http://www.ikegami.com)

■ Headquarters : 300 Route 17 South, Mahwah, NJ 07430 USA ..... TEL.+1-201-368-9171

### Ikegami Electronics (Europe) GmbH

■ URL: [www.ikegami.de](http://www.ikegami.de)

■ Headquarters : Ikegami Strasse 1, D-41460 Neuss, Germany ..... TEL.+49-(0)2131-1230

### Ikegami Electronics Asia Pacific Pte. Ltd.

■ URL: [sg.ikegami.co.jp](http://sg.ikegami.co.jp)

■ Headquarters : 1 Tampines Central 5, #06-04 CPF Tampines Building, Singapore 529508 ..... TEL.+65-6260-8820

